A decorative graphic on the left side of the page consisting of a series of overlapping, rounded mountain peaks. Each peak is rendered as a wireframe mesh of interconnected triangles, creating a 3D effect. The peaks are light gray and recede into the distance from left to right.

# Software Installation Guide

 **LoggerSuite 13.7.0**

# Before you install

**LoggerSuite** is a single installation package for surface acquisition systems software.



Before following the installation instructions below ensure that the logger unit is **NOT** connected to your computer..

## MS Windows Operating Systems

Matrix	Win8, Win10, Win11	32 & 64 bit
Bbox / Altlogger Jazz	Win8, Win10, Win11	32 & 64 bit
Abox / Altlogger / USB plugin	Win8, Win10, Win11	32 bit
OPAL / SCOUT	Win8, Win10, Win11	32 & 64 bit

# Software installation

- 1/ Insert the Software Installation USB key into your computer and start the **Setup.exe** manually
- 2/ The installation wizard shows the software version (**Figure 1**) and displays the license agreement (**Figure 2**). After reading the agreement click on "I accept..." to continue the installation.
- 3/ Choose the destination directory. The default installation folder is **C:\Logger** (**Figure 3**). To confirm your choice and proceed click on **Next**.
- 4/ A dialog box showing all installation options you selected so far will be displayed. Click **Install** to proceed with the installation (**Figure 4**).

**5/** If you are upgrading from older versions all tool configuration files and headers will be moved to the new destination folders. If you wish to install additional configuration files you may do so using the **LoggerSettings** application which is part of **LoggerSuite**.

**6/** The USB drivers are installed at the end of the procedure. Depending on the MS Windows operating system in use, the USB installer may ask you to confirm the installation.

On **32bit** Operating systems a verification message may appear. Select the option **“Install this driver software anyway”** to proceed with its installation (**Figure 5**).

---


On **64bit** Operating systems the message as shown in (**Figure 6**) may appear for each of the driver files. Select the option **Install** to proceed with its installation.

Upon successful installation of the USB drivers the message box shown in (**Figure 7**) will be displayed. Click on **OK** to proceed with the installation. The installation process is now finished.


If the installation process fails, check that you are allowed to install unsigned drivers.

**7/** At the end of the installation process the Installer will launch the **LoggerSettings** application. This software application allows configuration of the logger itself (depth encoder, tension gauge,...) and should be used to install any additional tool configuration files (sub, stack, tol,...files). Please refer to the **LoggerSettings** guide for more details.


**8/** You can now connect the logger to your computer, turn the device on and start the **Logger** software on your computer.

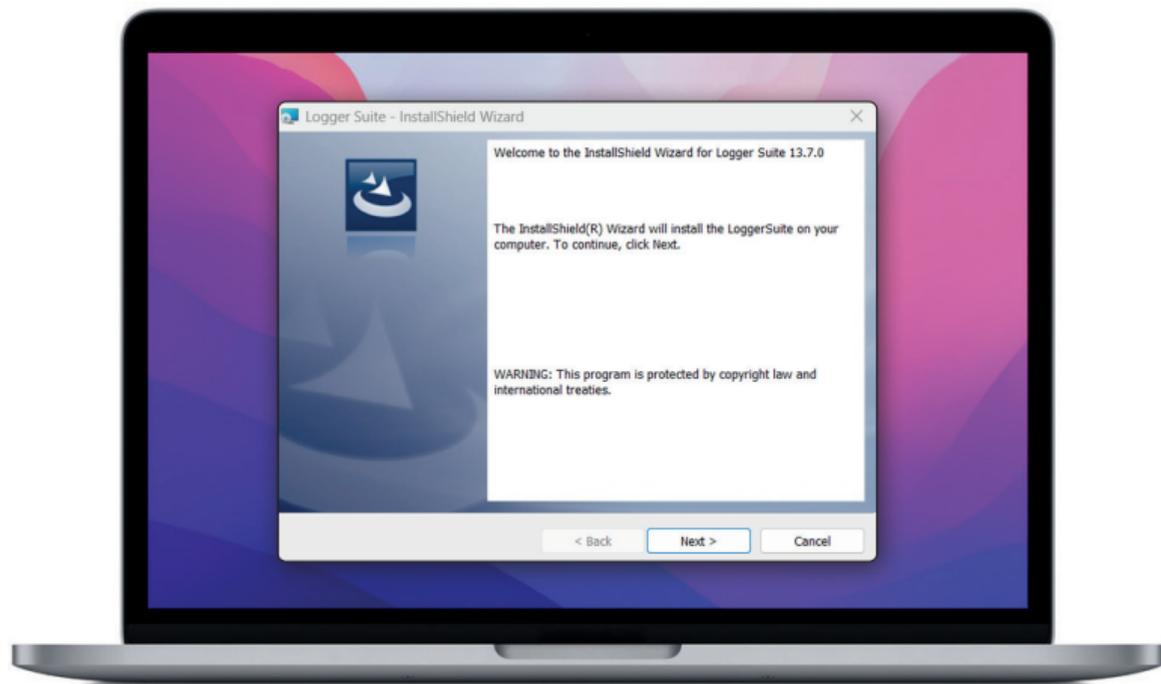


( Figure 1 )

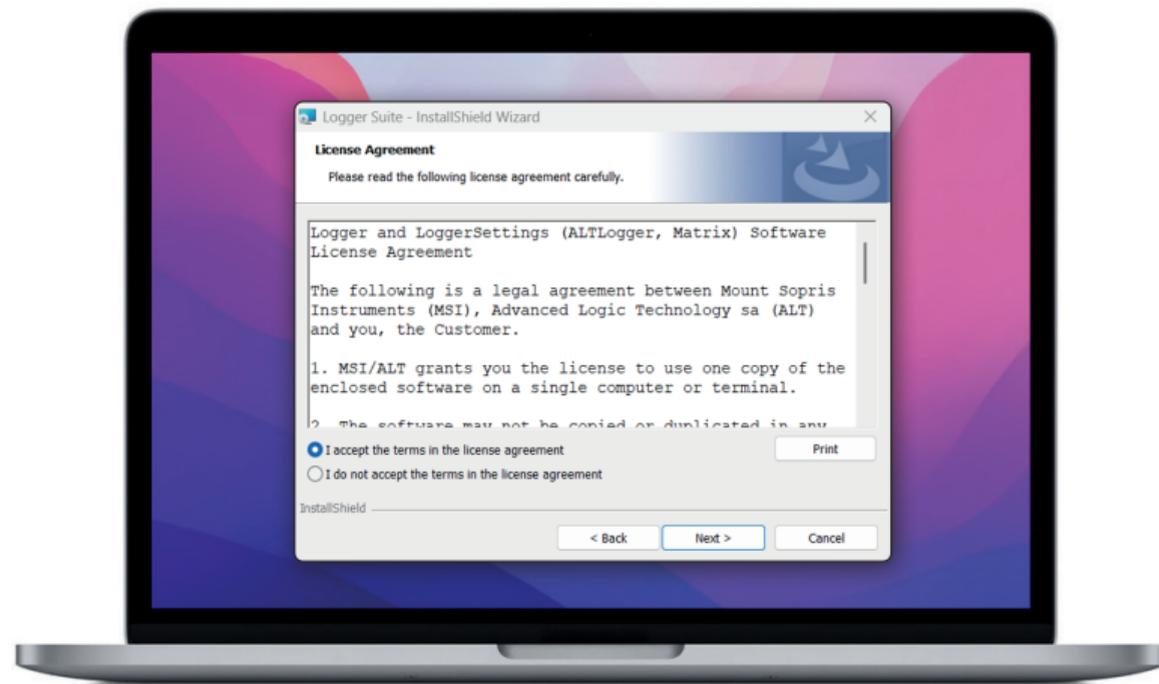


( Figure 2 )

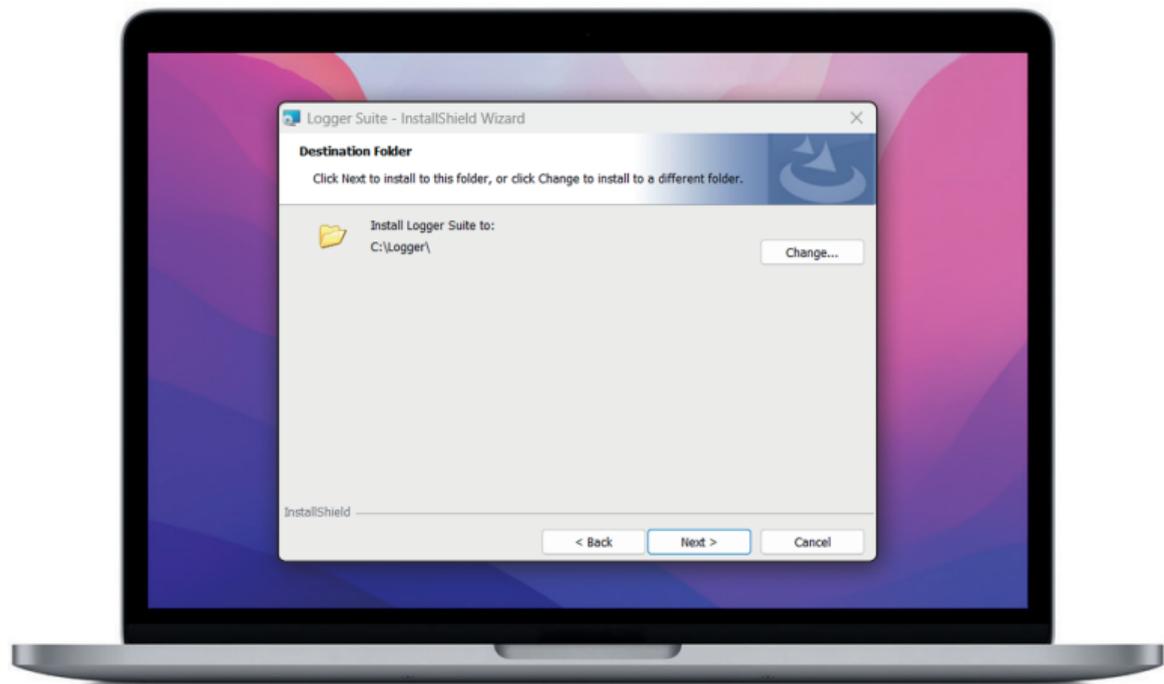


[ Figure 3 ]

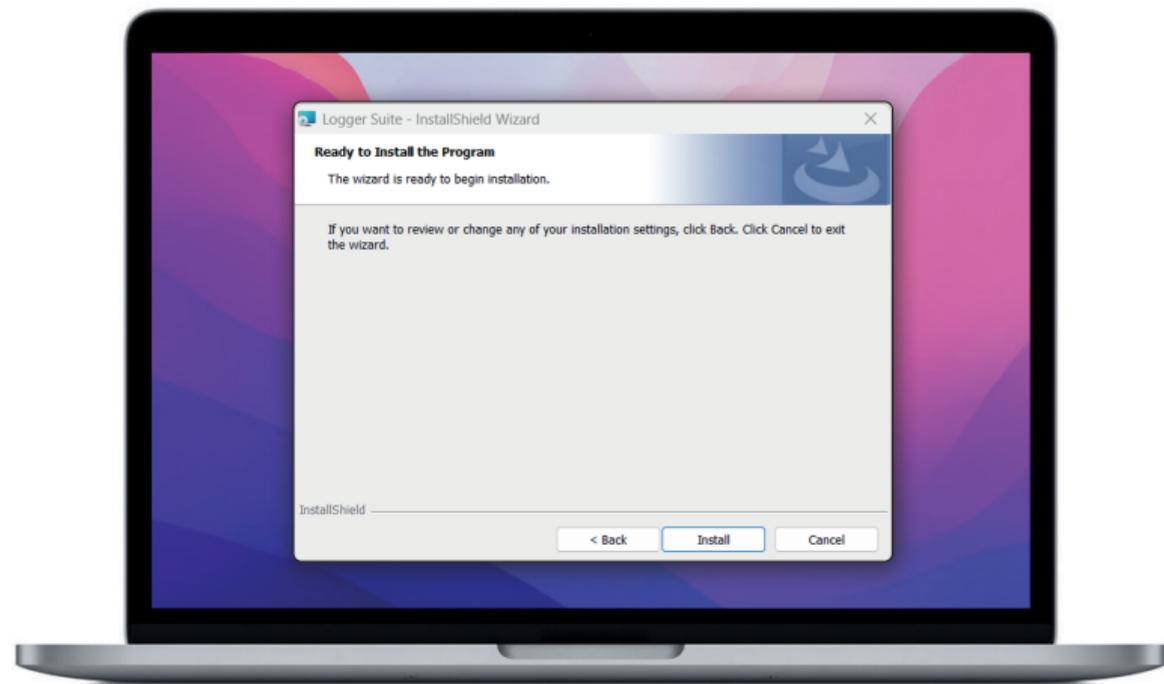


[ Figure 4 ]

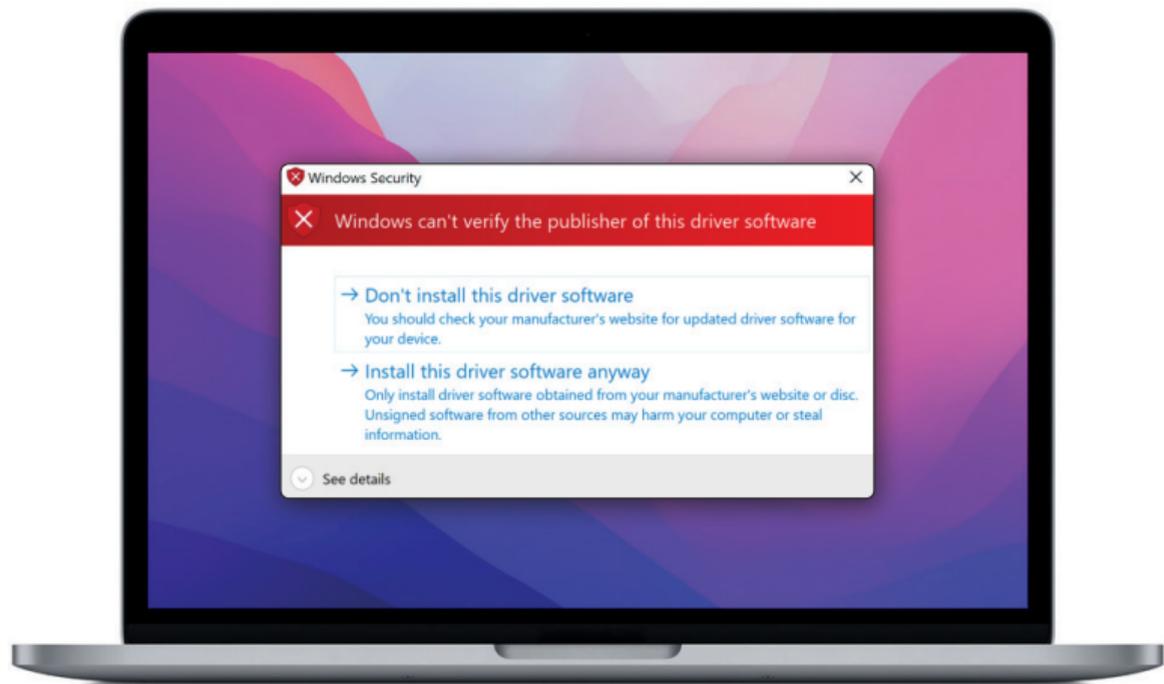

[ Figure 5 ]

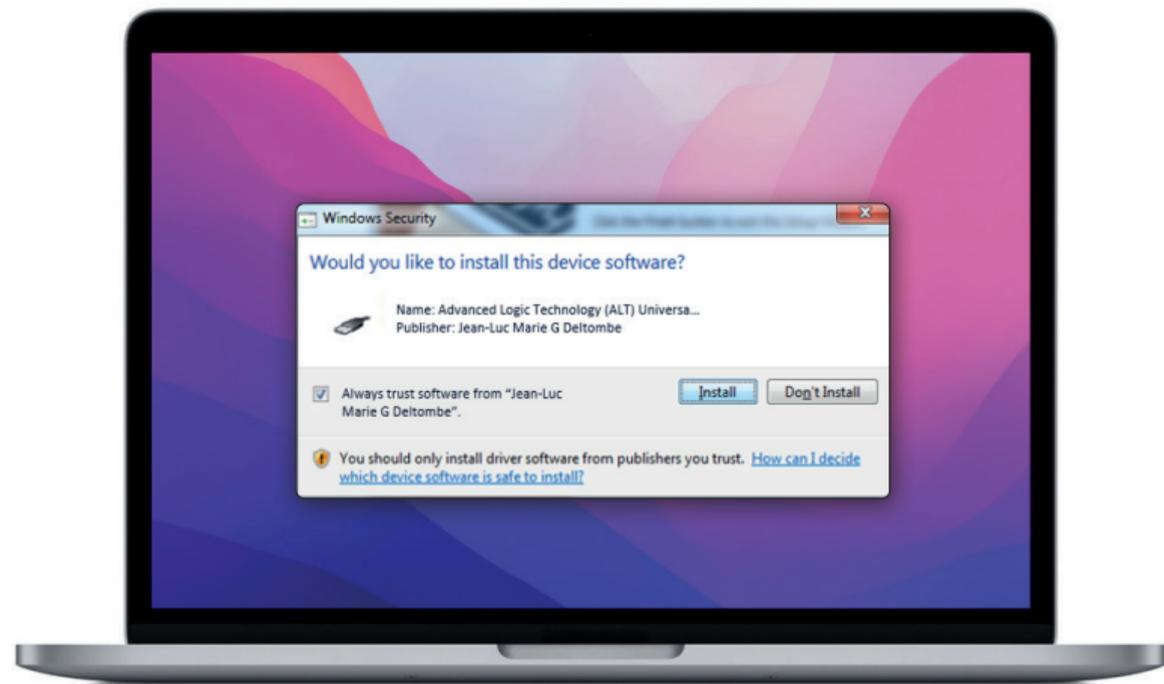

[ Figure 6 ]

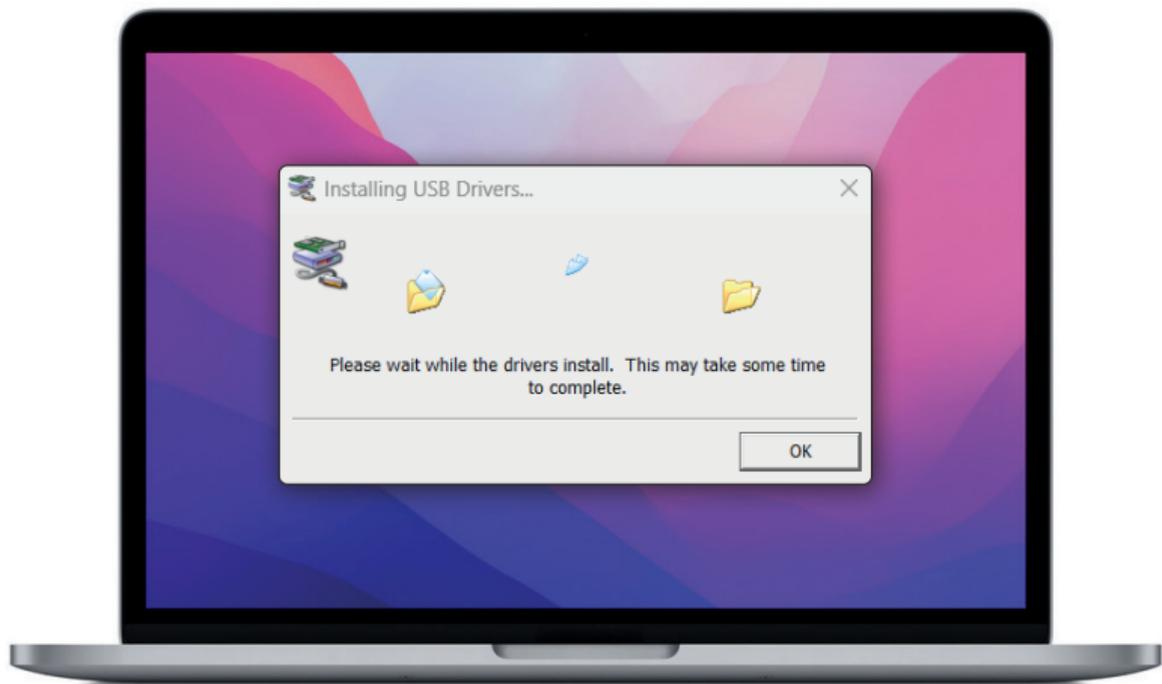

( Figure 7 )

**ALT**  
**Headquarters**

ZAE Solupla  
30H route de Niederpallen  
L-8506 Redange  
Luxembourg  
T. +352 28 56 151

[www.alt.lu](http://www.alt.lu)

**ALT**  
**Asia**

36th Floor, Menara Maxis  
Kuala Lumpur City Centre  
50088 Kuala Lumpur  
Malaysia  
T. +60 3 2615 7261

[www.alt.lu](http://www.alt.lu)

